



The E0010.10 alarm appears on Rika pellet stoves when the pellet hopper lid is open.

Solution

1. Close the pellet hopper lid
2. Acknowledge the error message

If the alarm persists even though the lid is properly closed, and if the error reoccurs, a technician must be called.