

RIKA Blue Screen (Blue Screen BS00 through BS23)



Sorry, something went wrong :(

Code: BS06

Please restart your stove!

If the problem occurs again,
please note the error code and
contact the RIKa customer service.

A blue screen (codes BS00 through BS23, for example, BS06) may appear on the Rika touchscreen in the event of an internal communication or update error between the screen and the motherboard.

Resolution

1. Note the code displayed (BS followed by two digits)
2. Unplug the stove, wait at least 10 seconds, then plug it back in

If the blue screen reappears after restarting, contact your customer service representative and provide the BS code.